TEAC

BTS25R / BTS25W

NFC Enabled Bluetooth Speaker

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

TEAC® WARRANTY PROCEDURE

v1.5.2: DEC 2011

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Customer Support Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name

_____

Owner's Address

_____

Postcode

_____

Model Name/No. Serial No.

_____

Dealer's Name

_____

Dealer's Address

_____

Postcode

_____

Authorised Service Centres in Major Australian Cities

NSW
151 Arthur Street
Homebush West, NSW 2140

Queensland
Unit 1, 320 Curtin Ave West
Eagle Farm, QLD 4009

Western Australia
Unit 2, 50 Pilbara Street
Welshpool, WA 6106

South Australia
11 McInnes Street
Ridleyton, SA 5008

Victoria
282 Normanby Road
South Melbourne, VIC 3205

Thank you for selecting a TEAC product.

If you should require assistance with your product regarding its setup or operation, or if any difficulties arise, please call us directly for advice between Monday to Friday at 8.30AM – 6PM AEST at the

TEAC Customer Support Hotline

1300 553 315

teacservicesupport@awa.com.au
www.teac.com.au

TEAC® WARRANTY INFORMATION

v1.5.2: DEC 2011

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Terms & Conditions

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased, used and serviced in Australia.

2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.

3. Refund or replacement via your retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.

4. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
LED/LCD TV 32" (80 cm) and above	1 Year (In-Home Service/ Pick up Available)*
All other TEAC products	1 Year (Carry-in Service)

5. In Home Service/Pick up* Service
   This service will only be provided as part of this warranty if all the following conditions are met;
   a) The product is indicated in the Warranty Period Table.
   b) The product is within the warranty period.
   c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

   If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

   Carry-in Service
   Where In-Home service/Pick up* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remote, Power Adaptors and Cables.

7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.

8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.

9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features & specifications.

10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.

11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.

12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
    a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
    b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
    c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product.

13. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.

14. TEAC reserves the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

15. LCD dead pixel policy, please contact TEAC Customer Support Hotline on 1300 553 315 for assistance.

SAFETY INSTRUCTIONS

Please read this manual carefully before operating and save it for future reference.

1. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and maintain well ventilated conditions. Do not impede ventilation by covering the ventilation openings with items such as newspaper, tablecloth, curtains etc.

2. **CAUTION**: Only use attachments/accessories specified or provided by the manufacturer (such as the power cord, battery etc included with the unit).

3. **WARNING**: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

4. **WARNING**: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing, and objects filled with liquid, such as vases, shall not be placed on the apparatus.

5. **CAUTION**: The direct plug-in power adapter is used as disconnect device, the disconnect device shall remain readily operable.

6. Take care with the power supply cord when the unit is not in use or being moved. Protect the power cord from damage through abrasions or cuts. If damage is found on the power cord, please seek for a replacement power cord specified by an authorized service person or the manufacturer that has the same characteristics as the original.

7. This product should not be disposed with other household wastes. To prevent possible harm to the environment or to human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

8. No naked flame sources, such as lighted candles, should be placed on the apparatus.

9. Use the apparatus in moderate climates.

LOCATION OF CONTROLS

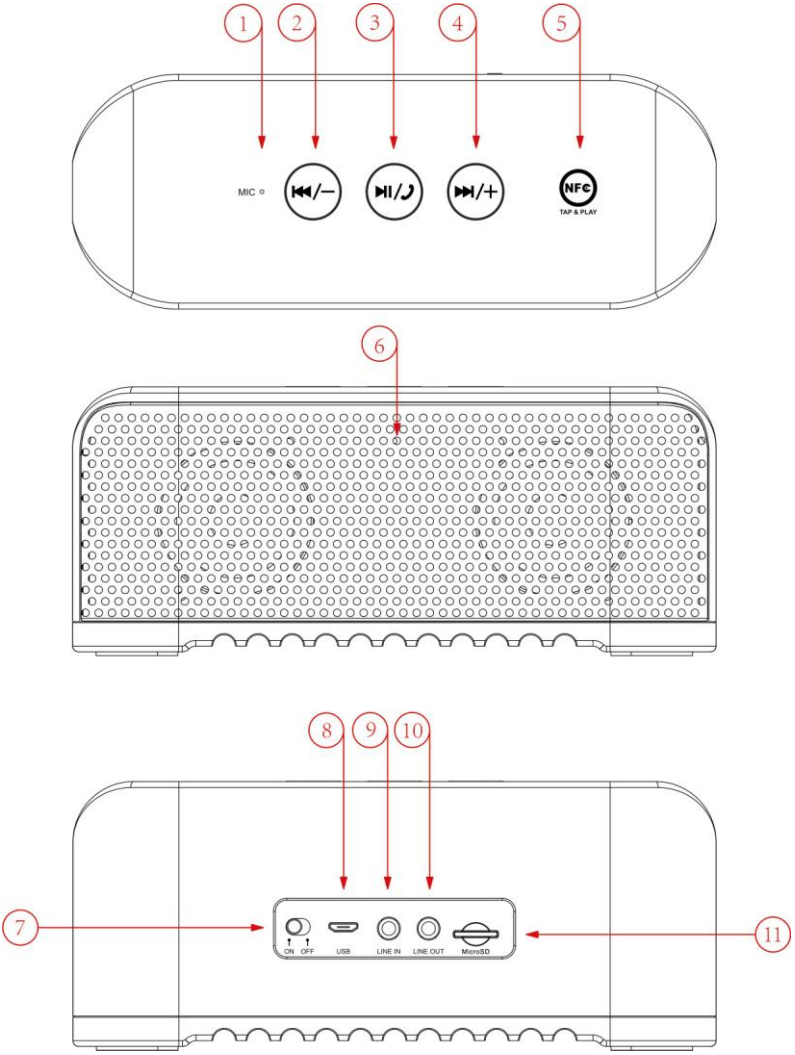

1. MICROPHONE
2. SKIP DOWN / VOLUME-
3. PLAY/PAUSE/ANSWER/END
4. SKIP UP / VOLUME+
5. NFC TOUCHPOINT
6. STATUS INDICATOR
7. MICRO USB DC JACK (for charging)
8. LINE IN JACK
9. LINE OUT JACK
10. MICROSD CARD SLOT
11. POWER ON / OFF

BLUETOOTH FUNCTION

Slide the **POWER ON/OFF** switch to ON, and the Sneaker Speaker will power on and enter Bluetooth mode automatically. The voice guidance will inform you that the Sneaker Speaker is ready to be paired via Bluetooth. The **STATUS INDICATOR** will start blinking, showing that the speaker is now in pairing mode.

PAIR THE SPEAKER USING NFC

1. With Near Field Communication (NFC), you can easily pair and connect the speaker to a NFC-enabled Android smartphone. Activate the phone's NFC feature to start.
2. Touch the NFC touchpoint on the unit with the NFC area of your Android device. The unit will pair and connect to the Android device automatically. After pairing successfuly, the **STATUS INDICATOR** will stop flashing, stays lighted and the voice guidance will announce that Bluetooth playback is ready.

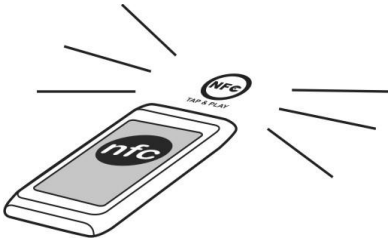

Note:

1. For further details on using NFC, please check your NFC-enabled device's user manual.
2. For other Bluetooth devices, pair the speaker manually according to instructions on the next page.

PAIR THE SPEAKER MANUALLY

1. Enable the Bluetooth function on your Bluetooth device.
2. Scan for devices via the Bluetooth menu on your Bluetooth device, and select the "Sneaker Speaker" from the list of detected devices. If you are prompted to enter the PIN code, please enter "0000" (four zeros).
3. After a successful pairing, the **STATUS INDICATOR** will stay lighted up. The voice guidance will announce that Bluetooth playback is ready.

Note:

1. Only one Bluetooth device can be connected to the speaker at any time. If the speaker is already connected to another Bluetooth device, the speaker will not appear in the list of detected devices on your Bluetooth device.
2. If the speaker has previously connected to the Bluetooth device, the speaker will connect to the Bluetooth device automatically within 30 seconds.
3. Depending on the device manufacturer, pairing may need to be redone on some Bluetooth devices.
4. If the connection is lost, the voice guidance system will announce it. If you wish to reconnect, turn the Sneaker Speaker off and on again using the **POWER ON/OFF** switch.
5. For more information about using Bluetooth, please check your Bluetooth device's user manual.

MUSIC CONTROLS IN BLUETOOTH MODE

1. Play music from the paired Bluetooth device. (Use your regular music program, etc.)
2. To pause music playback, press **PLAY/PAUSE/ANSWER/END** once. To continue from where the music was paused, press **PLAY/PAUSE/ANSWER/END** again.
3. In Play or Pause mode, when **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME-** is pressed once, the speaker will advance to the next track or return to the beginning of the track.
4. Press and hold **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME-** to adjust the volume.

Note: You can also control music playback and volume on the source Bluetooth device.

PLAYING AUDIO VIA MICRO SD CARD

1. When the speaker is in Bluetooth mode, insert the MicroSD card to enter SD Card mode. The first track will play automatically, and the **STATUS INDICATOR** will blink slowly.
2. To pause music playback, press **PLAY/PAUSE/ANSWER/END** once. To continue from where the music was paused, press **PLAY/PAUSE/ANSWER/END** again.
3. In Play or Pause mode, when **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME-** is pressed once, the speaker will advance to the next track or return to the beginning of the track.
4. Press and hold **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME–** to adjust the volume.
5. Press and hold **PLAY/PAUSE/ANSWER/END** to go back to Bluetooth mode.

Note: If a MicroSD Card is already inserted when the Sneaker Speaker is in Bluetooth mode, pull out and reinsert the MicroSD Card if you wish to re-enter SD Card mode.

PLAYING AUDIO VIA LINE IN

1. Connect an Aux In cable (provided) to the **LINE IN JACK** of the speaker and to the audio output socket on an external audio player such as your MP3 player.
2. The Bluetooth or Micro SD Card function is disabled when the cable is plugged in.
3. Control playback from the connected external audio player.
4. To mute the audio output, press **PLAY/PAUSE/ANSWER/END** once.
5. To unmute, press **PLAY/PAUSE/ANSWER/END** again.
6. Press and hold **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME–** to adjust the volume.
7. Press and hold **PLAY/PAUSE/ANSWER/END** to enter Bluetooth mode.

Note: If an Aux In cable is already connected when the Sneaker Speaker is in Bluetooth mode, pull out and reinsert the cable plug if you wish to re-enter Line In mode.

CONNECTING TO AV RECEIVER

1. Connect an audio cable (not included) to the **LINE OUT JACK** of the Sneaker Speaker and to the audio input socket(s) on the AV receiver. The type of audio cable required depends on the AV receiver's audio input socket type.
2. Start music playback on the Sneaker Speaker. The music will be output via the AV receiver.
3. To mute the audio output, press **PLAY/PAUSE/ANSWER/END** once.
4. To unmute, press **PLAY/PAUSE/ANSWER/END** again.
5. Press and hold **SKIP UP/VOLUME+** or **SKIP DOWN/VOLUME–** to adjust the volume.

HANDS-FREE FUNCTION

1. When the speaker is Bluetooth connected to your mobile phone, calls made or answered will automatically transfer to the speaker, which will function as a speakerphone.
2. When there is an incoming call, the voice guidance system will announce the incoming call.
3. If you want to answer the call, press **PLAY/PAUSE/ANSWER/END** once. Music will be automatically paused during the call.
4. If you want to refuse the call, press and hold **PLAY/PAUSE/ANSWER/END**.
5. To make a call, call will automatically transfer to the speaker. If not, press the **PLAY/PAUSE/ANSWER/END** once.
6. During a call, press and hold **SKIP UP/VOLUME +** or **SKIP DOWN/VOLUME –** to adjust the volume.

CHARGING THE SPEAKER

1. When the battery is low, the voice guidance system will announce it.
2. Connect the Micro USB plug to the **MICRO USB DC JACK** of the speaker, then connect the standard USB plug end of the cable to a powered USB port on a computer or other USB charging device, such as the provided AC adapter.

TECHNICAL SPECIFICATIONS

- Audio Output: $2W_{RMS}$ (L) + $2W_{RMS}$ (R)
- Connectivity
    - 3.5mm LINE IN jack
    - 3.5mm LINE OUT jack
    - Power input jack
- Power Requirement
    - AC 100-240V, 50/60Hz
    - Rechargeable Battery
- Unit Dimensions (W x H x D): 170mm x 70mm x 62.3mm
- Net Weight: 387g
- Gross Weight: 577g

** Specifications and features are subject to change without prior notice*

**Weight and dimensions are approximate*

TEAC®

TEAC CUSTOMER SUPPORT HOTLINE (TCS)
1300 553 315
Between Monday to Friday – AEST 8.30AM to 6PM